Couning Gear Rest Instruction

For use with Compatible Brother TN360 Jumbo Yield Toner Cartridge

The standard Brother TN360 High Yield toner cartridge is est. 2,600 page yield @ 5% text print coverage. You are require to rest the counter gear once the toner low indicator warning start to display on the printer.

Counter gear rest

- 1. Remove the toner cartridge from the printer.
- 2. Push the white gear protrusion clockwise following below instruction. See Picture -01
- 3. Once the white gear reaches its default position the cartridge is now ready for another 2,600 pages. See Picture -02



Picture -01

Push the white gear protrusion clockwise

Once the white gear reaches its default position the



gear reset is now completed.

Picture - 02